



CLEANING AND MAINTENANCE INSTRUCTIONS

Cleaning

- Operate the shade daily. The up and down movement will “shake off” most dust preventing build-up. This also maintains clarity of the shade.
- It is recommended that the shade remain in the brackets or cassette while cleaning to prevent handling and reinstallation of the shade.
- Dust, wipe or dry in a single direction. Hold the shade taught with one hand as you clean with the other. Use a 100% lint-free cloth.
- To remove fingerprints, water spots or greasy residue, USE ISOPROPYL ALCOHOL (rubbing alcohol) or ACETONE on the lint-free cloth.
- DO NOT use abrasive cleaning or wiping materials such as paper towels, sponges, brushes or brooms.
- DO NOT use Windex or other ammonia-based window cleaning solution.
- DO NOT use any soap and water.

Maintenance

- There are no service-oriented parts supplied with the shade, so no adjustment or repair of the shade should be attempted by anyone other than the professional installer.
- To prevent damage, the shade should be in the rolled-up position in extreme windy conditions or when painting or refinishing around windows, wall or trim.
- Re-rolling by other than the use of the chain/cord roll-up device may cause the shade material to crease, dent, fold or become misaligned.