
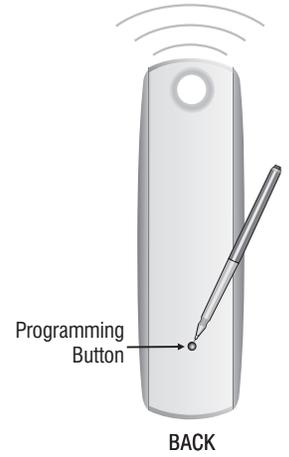
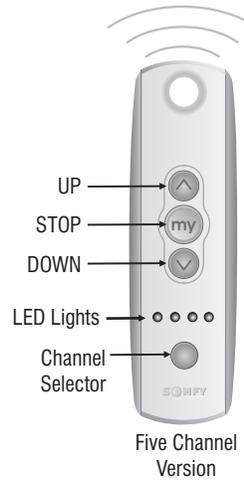


SOMFY TELIS RTS REMOTES SINGLE & FIVE CHANNEL

Part #'s

- 1810632 Telis 1 RTS Pure
- 1810633 Telis 5 RTS Pure
- 1810639 Telis 1 RTS Silver
- 1810641 Telis 5 RTS Silver
- 1810650 Telis 1 RTS Lounge
- 1810652 Telis 5 RTS Lounge
- 1810643 Telis 1 RTS Patio
- 1810645 Telis 5 RTS Patio

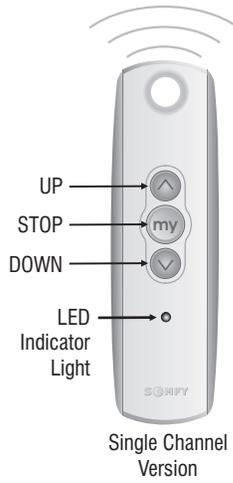

OPERATING INSTRUCTIONS

1. Select the shade to operate by pressing the Channel Select Button. The small LED lights will light up each time the Channel Select Button is pressed to show what channel is being operated.



2. To raise your window shade or retract your awning, simply press the up (▲) button.



3. To lower your window shade or extend your awning, simply press the down (▼) button.



4. If you want to stop your shade or awning while it is moving, press the center (my) button.



SETTING FAVORITE POSITION

1. Select the shade to operate by pressing the Channel Select Button. The small lights will light up each time the Channel Select Button is pressed to show what channel is being operated. The fifth channel is activated when all 4 lights illuminate.



2. Using the up or down buttons, bring the shade or awning to your favorite position, for example halfway down or out. Press The center button to stop the shade or awning.



SETTING FAVORITE POSITION...cont'd

3. Press and hold the center (my) button for 2 seconds to record the position.



4. To reach your favorite position, press the center (my) button whenever the shade is already stopped. The shade or awning will automatically go to that position.




ADDING A NEW REMOTE

1. With your current remote, select the shade to operate by pressing the Channel Select Button. The small LED lights will light up each time the Channel Select Button is pressed to show what channel is being operated.




2. Using a paper clip or pen, press and hold the programming button on the back of the remote until your window shade jogs up then down.

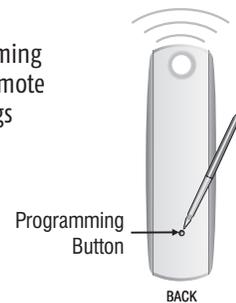

3. Get the new remote and select the new channel.




4. Using a paper clip or pen, press and hold the programming button on the back. The window shade will jog. This remote will now operate your shade or awning.

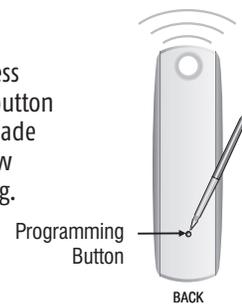

REPLACING THE BATTERY

1. Using a small screwdriver loosen the screws on the reverse side of the remote control and remove the back cover.

2. Replace the battery with one 2430 Lithium 3V battery.

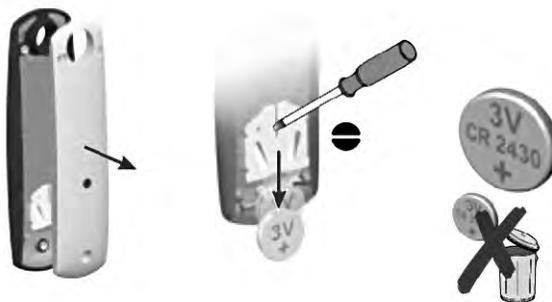

NOTE: IN CASE OF A LOST TRANSMITTER, PROFESSIONAL PROGRAMMING ASSISTANCE IS REQUIRED. PLEASE CONTACT SOMFY AT somfytech@somfy.com OR YOUR LOCAL DEALER AT www.somfysystems.com/dealerlocator.

HOME
MOTION BY

somfy.